Whipsnade Table

Assembly Instructions - Please keep for future reference



Dimensions

Width - 150cm

Depth - 90cm

Height - 75cm

Important - Please read these instructions fully before starting assembly.


If you need help or have damaged or missing parts, call the Customer Helpline: Homebase = 0345 0778888

- Customer purchase order No: 5500167862
 Date of Manufacture: 21.16

Components - Panels

If you have damaged or missing components, call the Customer Helpline: Homebase = 0345 0778888


Please check you have all the panels listed below.

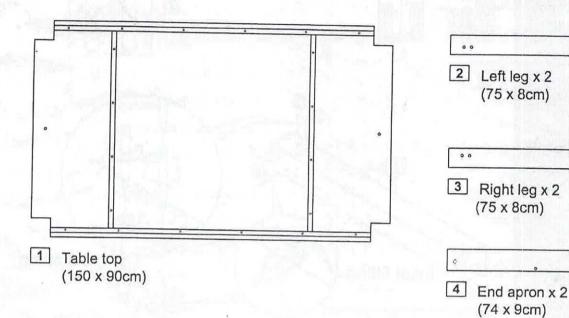


Components - Fittings

Please check you have all the fittings listed below

 Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

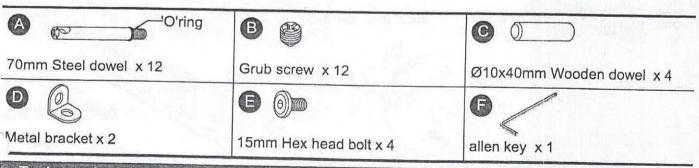





Ruler - Use this ruler to help correctly identify the screws

0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 76 80 65 80 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170

Assembly Instructions

Step 1

Fitting dowels

a: Attach 12 steel dowels

a into the inset fittings
that are located on legs

a, 3 as shown.


Use a pozi screwdriver to turn fittings (A) clockwise to fix.


Note: Insert steel dowels as far as shown. Ensure the direction of the holes on fittings are facing correctly as per diagram.

Do not over tighten.

b: Attach 4 wooden dowels (a) into the pre-drilled holes on end apron (4) as shown.

Note: Insert wooden dowels as far as shown.

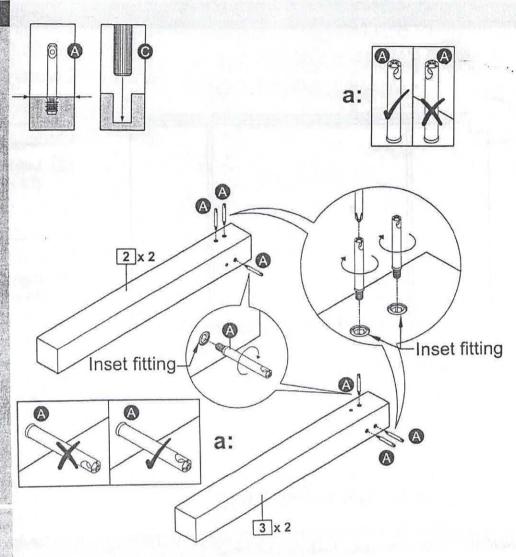

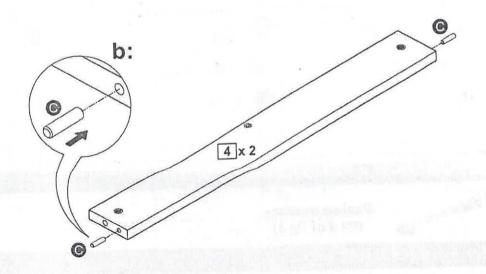


AssamblyInstations

Step 2

Attaching legs.

Attached legs 2, 3 onto apron 4 as shown.

Note: Ensure wooden dowels are aligned correctly with mating panels to avoid damage.

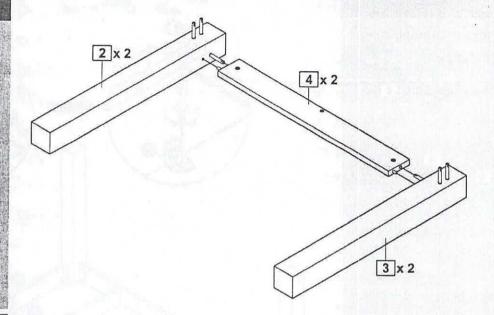


Step 3

Attach the structure assembled in **Step 2** to table top 1 as shown.

a: Fix legs 2, 3 onto table top 1 using 8 grub screws 3 shown.

b: Fix legs 2, 3 onto end apron 4 using 4 grub screws **3** shown.

Use a pozi screwdriver to turn fittings **(B)** clockwise to fix.

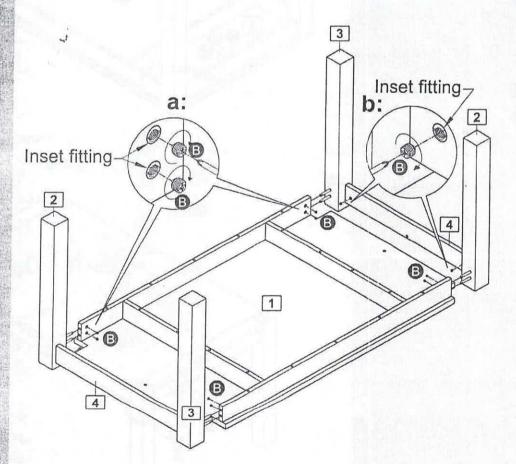

Step 4

Attaching metal bracket

a: Attach metal bracket


onto table top 1 as
shown.

Fix metal bracket **D** onto end aprons **4** and table top **1** using 4 hex head bolts **B** as shown.

Use allen key (5) to turn fittings (5) clockwise to fix.

b:Carefully stand the tables upright.

Assembly is complete.

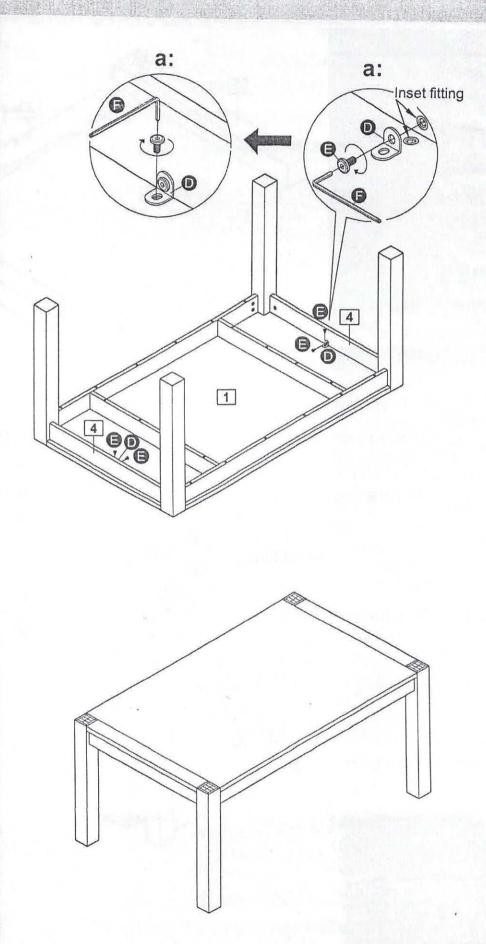



Safety and Care Advice

Important - Please read these instructions fully before starting assembly.

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



 We do not recommend the use of power drill/ drivers for inserting screws,

as this could damage the unit. Only use hand screwdrivers.

 Dispose of all packaging carefully and responsibly.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

 Regularly check and ensure that all bolts and fittings are tightened properly.

GENERAL CARE FOR WOODEN FURNITURE

(Please keep these guidelines for future reference)

"This furniture is made from wood & wood veneers. These natural unique materials exhibit variations in color, patterns and grain. These variations define the beauty of the product."

Following these basic steps will help you protect your furniture and increase its longevity:

- 1. Do not use abrasive detergents or powders. Dust with a clean, lint free cloth.
 - Frequent dusting will remove abrasive build up, which can damage a finish over time.
 - Spray polishes are best avoided as they contain silicones which may spoil the furniture's surface when building up over time.
- 2. Do not expose your furniture to direct sunlight.
 - Excessive exposure to sunlight can cause fading of your furniture.
 - · Ornaments placed on the furniture surface should be periodically moved to avoid shading.
- 3. Never place household heating appliances or hot objects directly on any furniture surface.
 - Always place a heat resistant coaster between your furniture and a hot object to protect your furniture.
- 4. Do not place your furniture near a heater, heat, dampness or moisture generating appliance.
 - · Extreme temperature and humidity changes can cause cracking and splitting.
 - · Some movement may be expected depending on environmental conditions.
- If the air is dry, some cracks may appear due to shrinkage. These should disappear when the moisture content increases.
- 5. Do not place rubber, cork, vinyl or plastic materials on the wood finish as chemicals within may react with the finish if left in contact for an extended period of time.
- 6. Do not expose your furniture to any liquids.
- All liquids should be wiped up immediately with a soft, slightly damp cloth in the direction of the wood grain. If sticky liquid residues do occur, they may be removed with a dilute solution of warm soapy water followed by a clean, damp sponge. The area should then be wiped immediately in the direction of the wood grain with a clean, soft white cloth until completely dry.
 - Nail polish remover, hairspray, perfume, potpourri & any other products that contains solvents can damage wood & upholstery finishes.
- 7. Please do not strike, hit or stand on furniture.
 - · Furniture is designed and built for its intended purpose.
 - · When writing, use a mat to protect the table or desk surface.
- 8. When moving furniture, please lift, do not drag. Protect the surface and corners from knocks & scratches.
 - Take care when handling. Obtain assistance as necessary.
 - Once in place make sure it stands level to ensure smooth opening of the doors and running of the drawers.
- 9. Furniture containing glass.
 - Do not use abrasive cleaners to clean glass surface, use a damp cloth with either washing up liquid or soft soap.
 - Do not place a heavy object on the glass surface. Do not strike the glass with a sharp object.
 - Do not place felt with glue, cork or plastic dots between glass & finished surface since these items can react with a finish.
- 10. Any assembly required should follow the sequence of steps in the Assembly Instruction Sheet.
 - Please retain assembly instructions and hardware for future reference and use.
 - Periodically check all fixings to ensure none have come loose. Re-tighten when necessary.
- Furniture can be dangerous if incorrectly assembled. Assembly should be carried out by a competent person(s). No liability will be accepted
 from damage or injury caused by incorrectly installed or assembled furniture.
- 11. If the furniture is dented or scratched at any time during use, this can usually be repaired by a qualified technician: Please contact your retailer.

WITH PROPER CARE, THIS FURNITURE WILL GIVE YOU MANY YEARS OF USE.

IW-10-0010-0017-R3