ASSEMBLY INSTRUCTION

Lifestyle FURNITURE

www.lifestylefurniture.co.uk

15 MINS

APPROXIMATE ASSEMBLY TIME

 


FLOOR AREA 2M X 2.5M




REQUIRED ASSEMBLY SPACE





ASSEMBLED DIMENSIONS

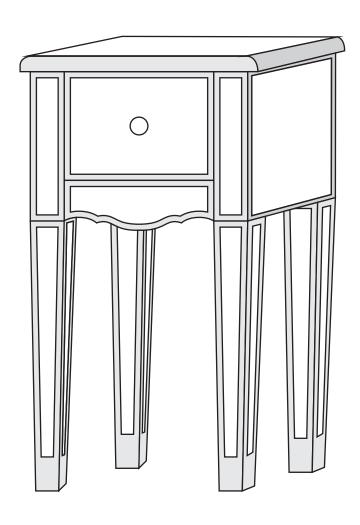


ASSEMBLY INSTRUCTION

Lifestyle

FURNITURE

www.lifestylefurniture.co.uk



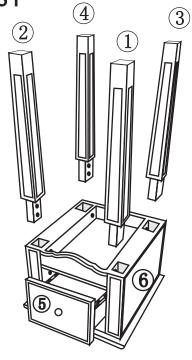

NO.PARTS LIST QTY


(2) Leg-Front/R 1pcs

(3) Leg-Back/L 1pcs


(4) Leg-Back/R 1pcs

5 Drawer 3pcs

(6) Case 1pc

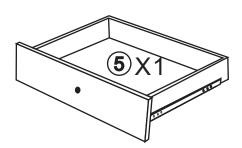

HARDWARE LIST

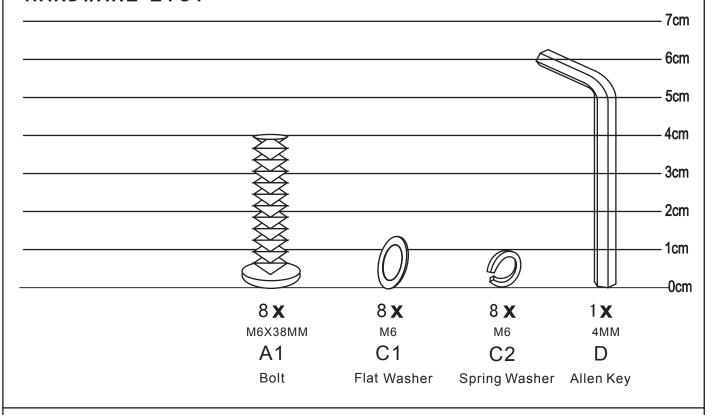


ASSEMBLY INSTRUCTION

Lifestyle FURNITURE


www.lifestylefurniture.co.uk

DRAWER LIST

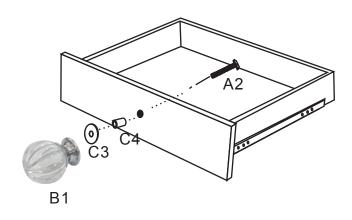

Warning: Ensure rubber washer toward outside of the glass.DO NOT over-tighten the knob, otherwise it will make glass broken

HARDWARE LIST

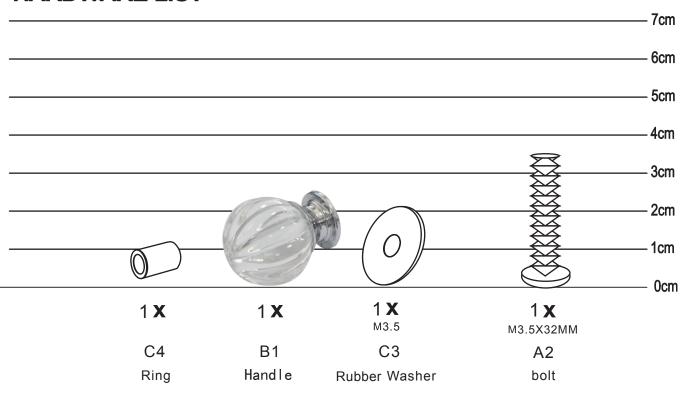

ASSEMBLY INSTRUCTION



Top Tips before you start!

- 1. Please check that all parts are present before you start the assembly of your furniture, as once assembled, the furniture is exempt from our home approval policy.
- 2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
- 3. For larger items, please ensure that you have sufficient space and people (as indicated on page 1) to assemble your product safely.
- 4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- 5. For the protection of your furniture, particularly items of high gloss finish, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
- 6. During assembly please take care not to over-tighten any fittings, as this may damage the product.

Care and Maintenance of your furniture.


- · Please periodically check all fittings and re-tighten as necessary.
- Please do not drag or pull your furniture.
- Wipe occasionally with a soft cloth slightly dampened with water. Then buff with a dry clean soft cloth.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- Please do not place hot item (e.g. hot drinks) directly on to the wood surface.
- If the glass is chipped or broken, stop using the product and consult the supplier.
- Please do not place very hot or very cold items on the glass surface, unless
 adequately thick table mats are used to prevent such items from coming into
 contact with the glass.
- Please do not use glass as chopping surface. Do not strike the glass with hard or pointed items.
- When cleaning glass panels use a damp cloth with washing up liquid or soft soap if necessary. Do not use washing powders or any other substances containing abrasives since these substances scratch glass panel.

ASSEMBLY INSTRUCTION

Lifestyle


FURNITURE

www.lifestylefurniture.co.uk

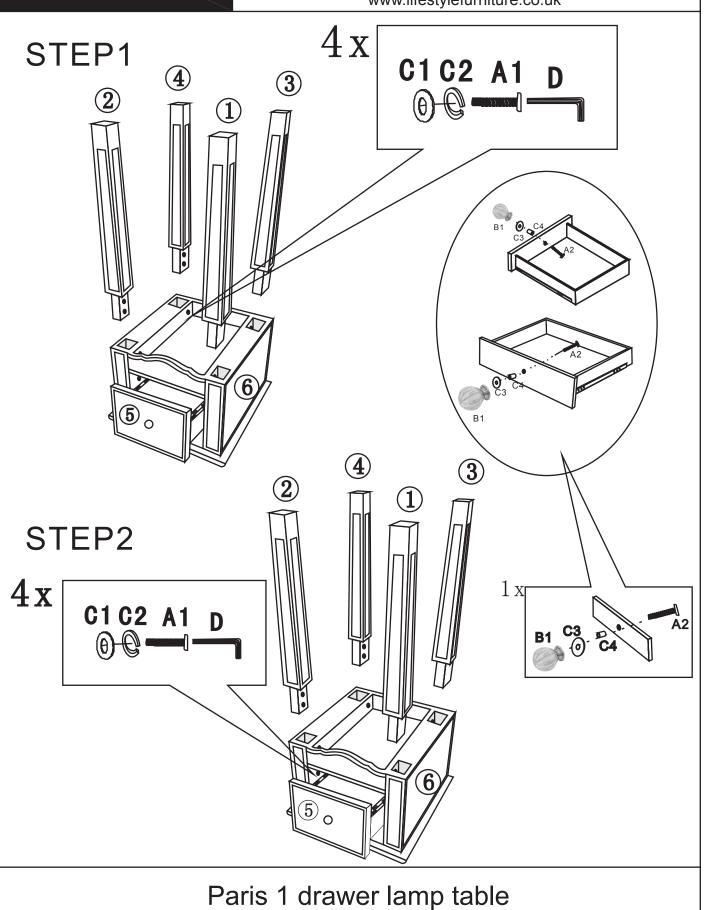


FITTING OF ANTI-TIP STRAP

STEP 1:

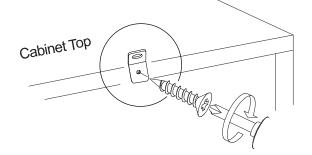


STEP 2:

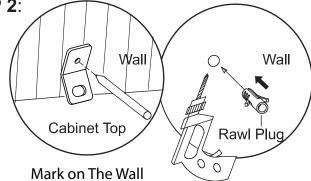

Drill a hole in the wall and insert the rawl plug.

STEP 3:

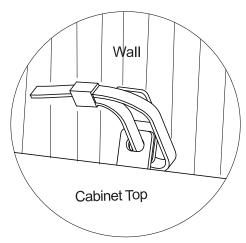

HARDWARE LIST






The screw supplied is to fix the Strap to the cabinet.


Note: Wall fixings are not supplied with this product as different wall materials require different types of fixing devices(such as Rawl plugs on brick work). You must use fixing devices suitable for the type of wall you intend to mount this products to. please ensure that the head of any screw used has diameter greater than the diameter of the mounting hole on the braket and that the fixing is safe and

The screw supplied is to fix the braket to the cabinet.

Wall Types:

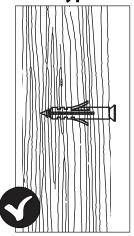


Wood (Can use rawl plug as shown)

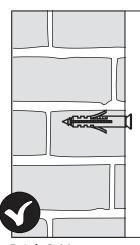


Brick & Masonry (Can use rawl plug as shown)



Chipboard (Can't use any type of wall plugs)

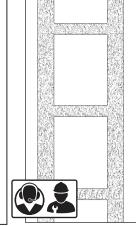

Cavity Wall (Special toggle wall plugs are needed, Seek expert advice)

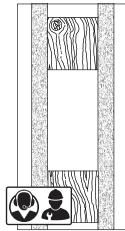

Stud Partition/ Plaster (Special toggle wall plugs are needed, Seek expert advice)