

ASSEMBLY INSTRUCTION

Lifestyle

FURNITURE

www.lifestylefurniture.co.uk

 
15 MINS

APPROXIMATE ASSEMBLY TIME




2 PERSON ASSEMBLY

FLOOR AREA
2M X 2.5M

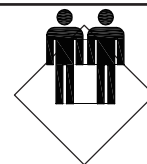

REQUIRED ASSEMBLY SPACE

 REQUIRED ASSEMBLY TOOLS

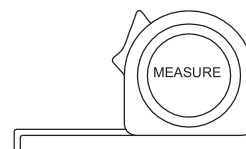

ASSEMBLED DIMENSIONS



Paris Console Table

 
ASSEMBLY INSTRUCTION

Lifestyle

FURNITURE



www.lifestylefurniture.co.uk

PART LIST

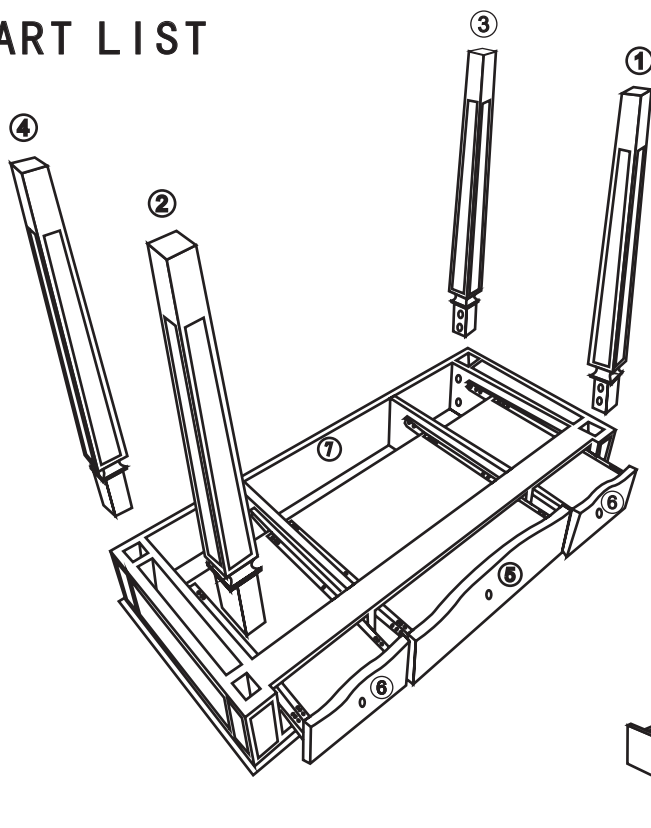

NO. PARTS LIST QTY

①	Leg-Front/L	1pcs
②	Leg-Front/R	1pcs
③	Leg-Back/L	1pcs
④	Leg-Back/R	1pcs
⑤	Drawer	1pc
⑥	Drawer	2pc
⑦	Table	1pc

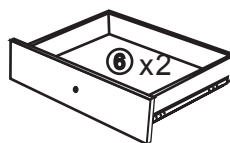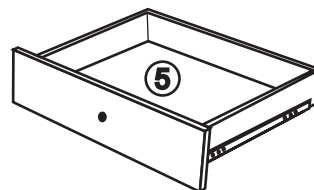  

HARDWARE LIST

				7cm
				6cm
				5cm
				4cm
				3cm
				2cm
				1cm
				0cm
8 X	8 X	8 X	1 X	
M6X38MM	M6	M6	4MM	
A1	C1	C2	D	
Bolt	Flat Washer	Spring Washer	Allen Key	

Paris Console Table

 
ASSEMBLY INSTRUCTION

Lifestyle

FURNITURE

www.lifestylefurniture.co.uk

DRAWER LIST

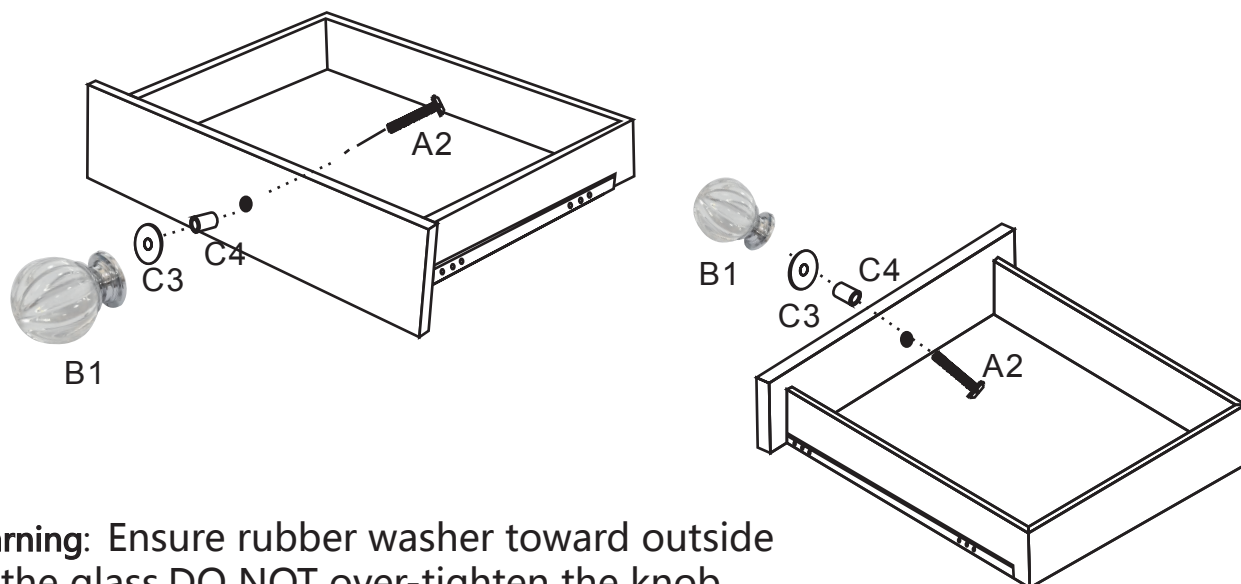

Warning: Ensure rubber washer toward outside of the glass. DO NOT over-tighten the knob, otherwise it will make glass broken

HARDWARE LIST

				7cm
				6cm
				5cm
				4cm
				3cm
				2cm
				1cm
				0cm
3 X	3 X	3 X	3 X	
		M3.5	M3.5X32MM	
C4	B1	C3	A2	
Ring	Handle	Rubber Washer	bolt	

Paris Console Table

Top Tips before you start!

1. Please check that all parts are present before you start the assembly of your furniture, as once assembled, the furniture is exempt from our home approval policy.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people (as indicated on page 1) to assemble your product safely.
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. For the protection of your furniture, particularly items of high gloss finish, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
6. During assembly please take care not to over-tighten any fittings, as this may damage the product.

 
Care and Maintenance of your furniture.

- Please periodically check all fittings and re-tighten as necessary.
- Please do not sit or stand on this item.
- Please do not drag or pull your tables.
- To clean your item, please use a soft cloth slightly dampened with water and wipe clean. Then buff with a dry clean cloth.
- To prevent damage to the table top, please do not place hot items (e.g. hot drinks) directly on the surface.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause finishes to de-laminate.
- If the glass is chipped or broken, stop using the product and consult the supplier.
- Please do not place very hot or very cold items on the glass surface, unless adequately thick table mats are used to prevent such items from coming into contact with the glass.
- Please do not use glass as a chopping surface. Do not strike the glass with hard or pointed items.
- When cleaning glass panels use a damp cloth with washing up liquid or soft soap if necessary. Do not use washing powders or any other substances containing abrasives since these substances scratch glass panel.
- Wipe occasionally with a soft cloth slightly dampened with water. Then buff with a dry clean soft cloth.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- Please do not place hot item (e.g. hot drinks) directly on to the wood surface.

Paris Console Table

ASSEMBLY INSTRUCTION


Lifestyle
FURNITURE
www.lifestylefurniture.co.uk

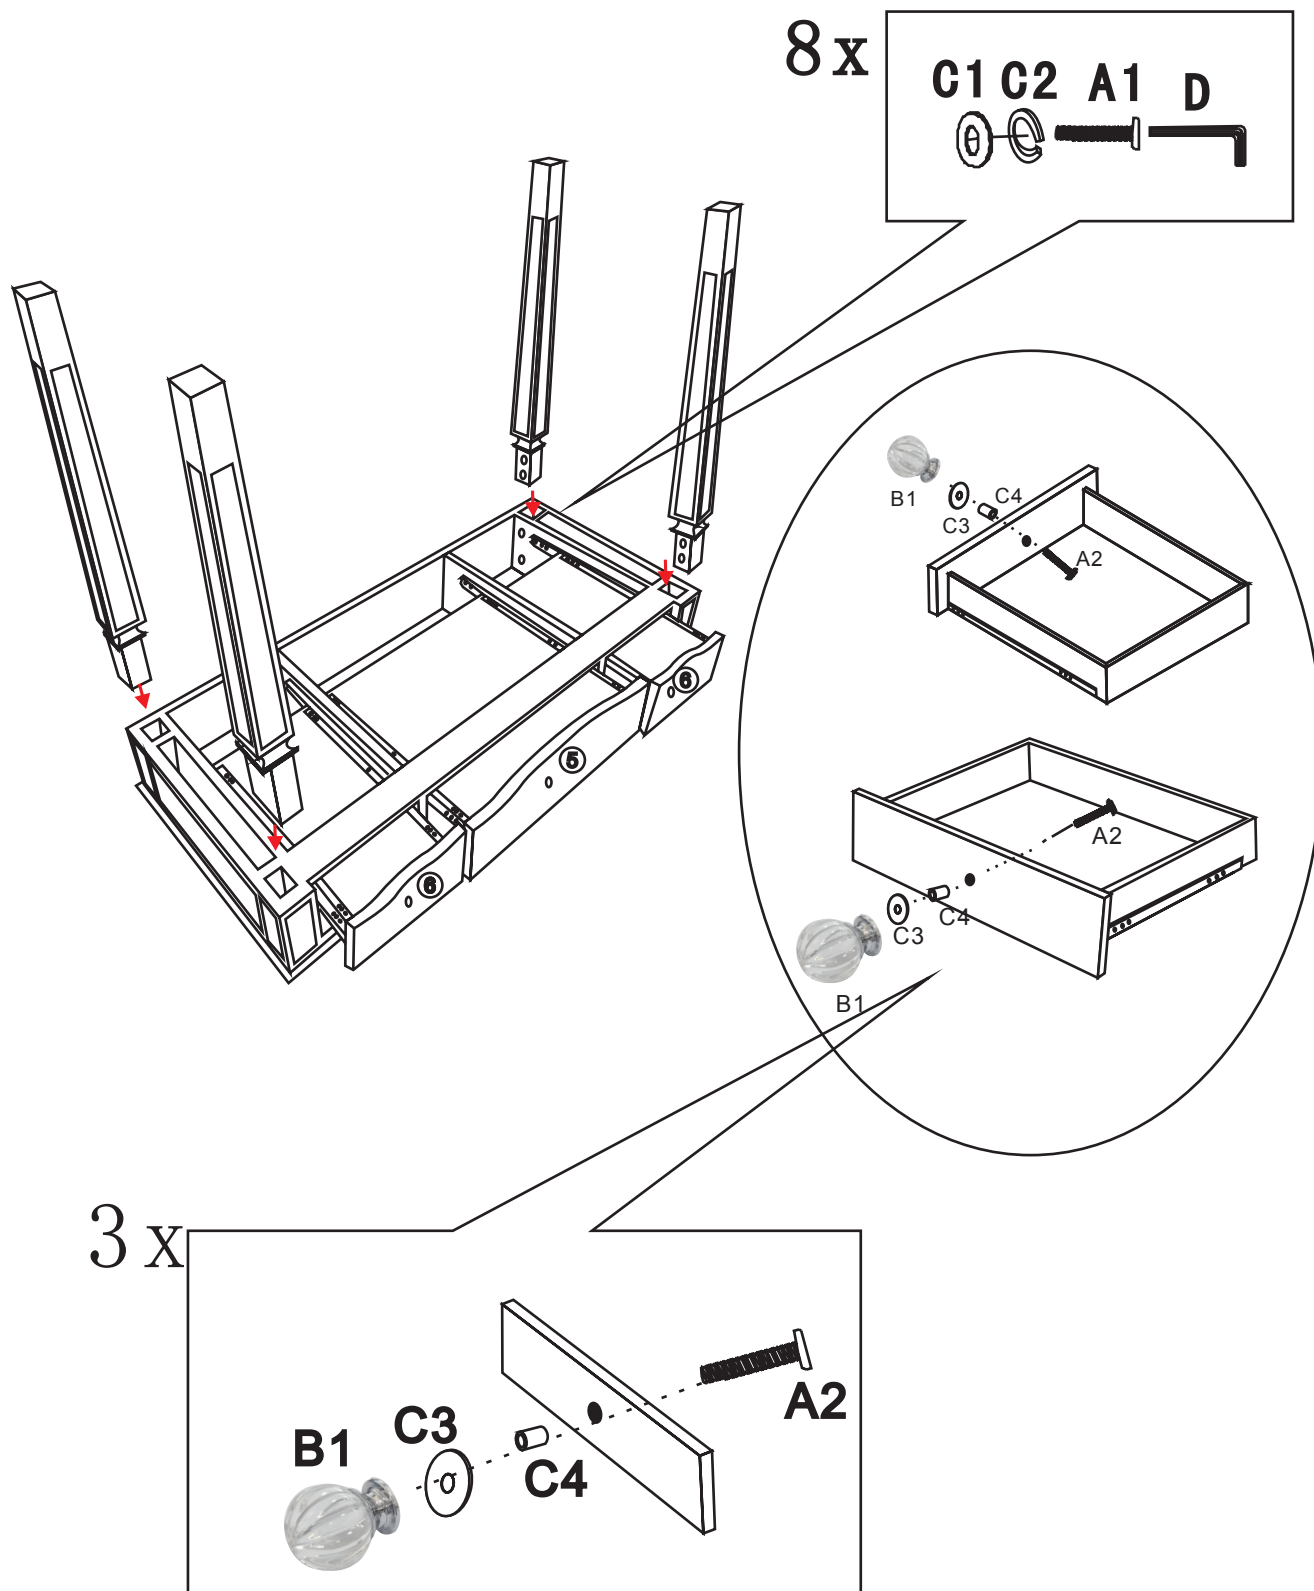


Paris Console Table

FITTING OF ANTI-TIP STRAP

 STEP 1:

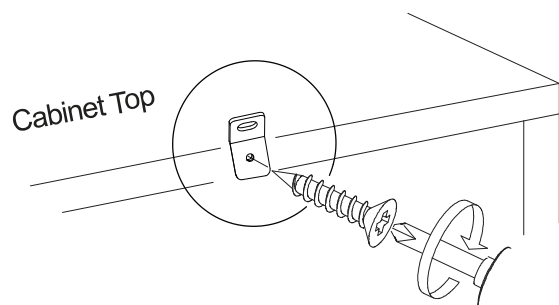


 STEP 2:

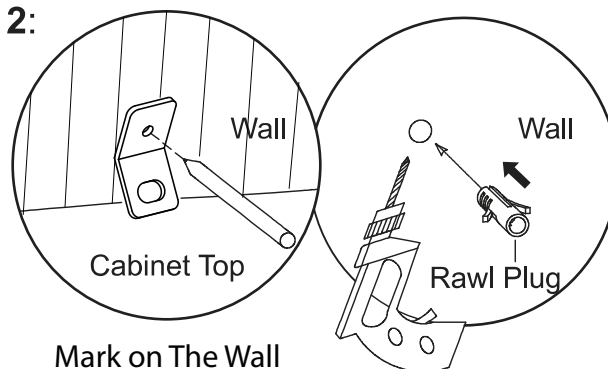

Drill a hole in the wall and insert the rawl plug.

 
STEP 3:

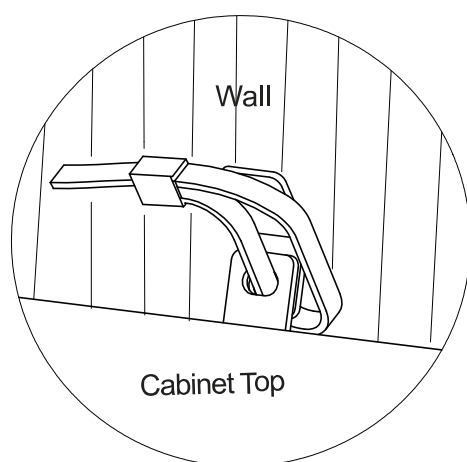

HARDWARE LIST



 
Anti-Tip Strap




The screw supplied is to fix the Strap to the cabinet.

Note: Wall fixings are not supplied with this product as different wall materials require different types of fixing devices (such as Rawl plugs on brick work). You must use fixing devices suitable for the type of wall you intend to mount this products to. please ensure that the head of any screw used has diameter greater than the diameter of the mounting hole on the bracket and that the fixing is safe and secure before use.
The screw supplied is to fix the bracket to the cabinet.

 
Wall Types :

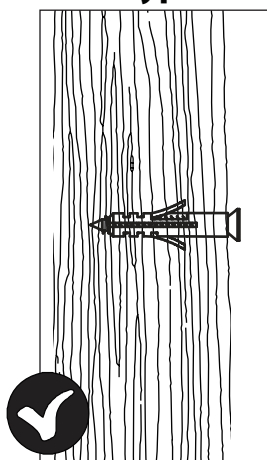


Wood
(Can use rawl plug as shown)

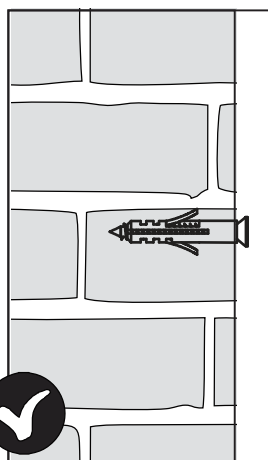 

 
Brick & Masonry
(Can use rawl plug as shown)

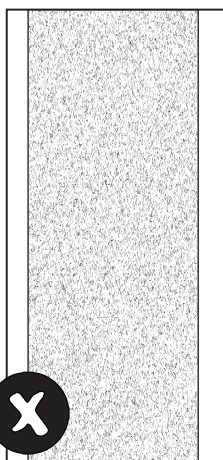

 Chipboard
(Can't use any type of wall plugs)

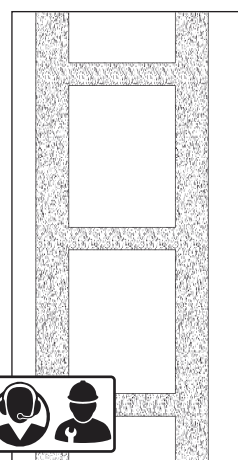

 Cavity Wall
(Special toggle wall plugs are needed, Seek expert advice)

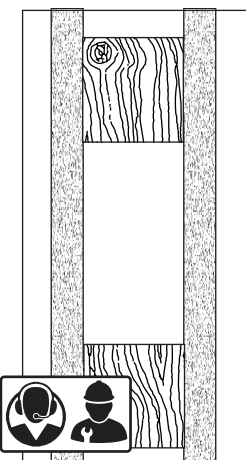

Stud Partition/Plaster
(Special toggle wall plugs are needed, Seek expert advice)

Paris Console Table