

# ASSEMBLY INSTRUCTION

**Lifestyle**  
FURNITURE  
[www.lifestylefurniture.co.uk](http://www.lifestylefurniture.co.uk)

 
**15 MINS**

APPROXIMATE ASSEMBLY TIME

2 PERSON ASSEMBLY




FLOOR AREA  
2M X 2.5M

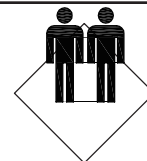


REQUIRED ASSEMBLY SPACE

 REQUIRED ASSEMBLY TOOLS

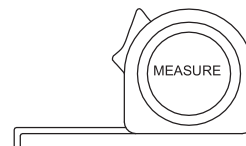

ASSEMBLED DIMENSIONS

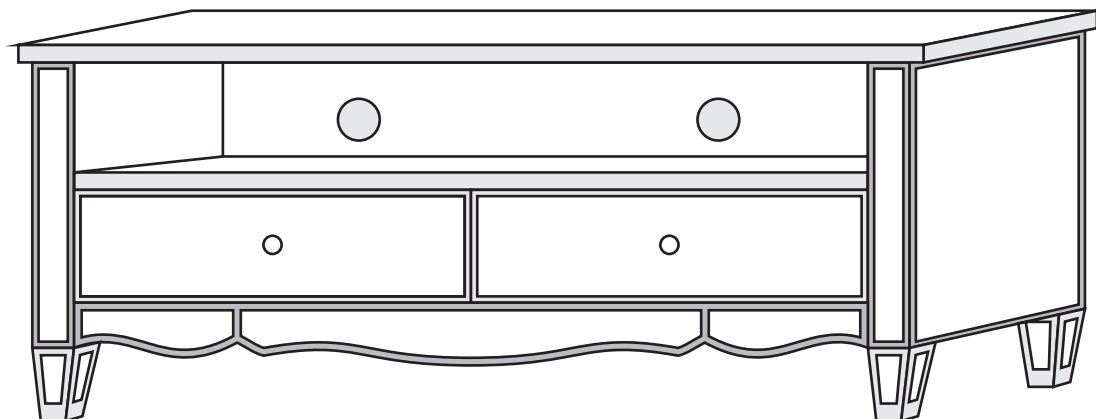 

Paris TV Unit


# ASSEMBLY INSTRUCTION
 
# Lifestyle

FURNITURE


www.lifestylefurniture.co.uk

## PART LIST

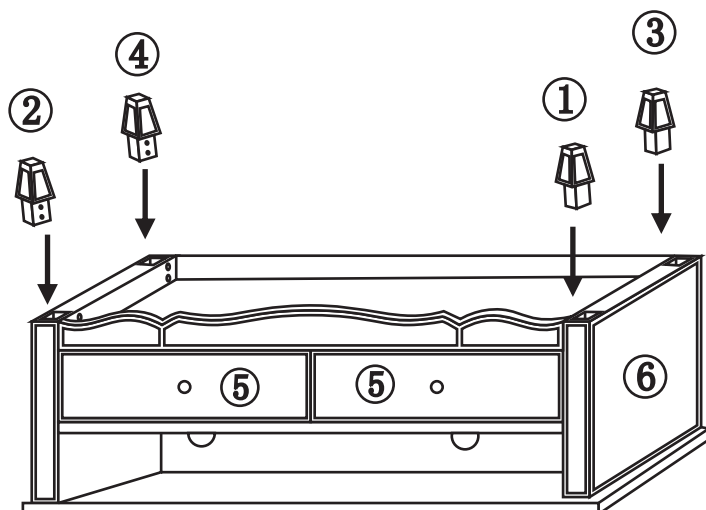

## NO. PARTS LIST QTY

 ①	Leg-Front/L	1pcs
②	Leg-Front/R	1pcs
③	Leg-Back/L	1pcs
④	Leg-Back/R	1pcs
⑤	Drawer	2pcs
⑥	Case	1pc

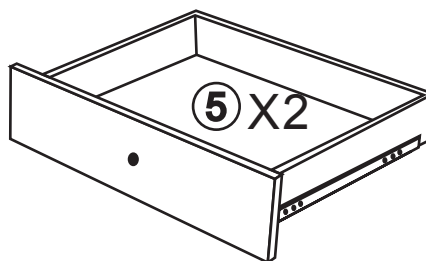

## HARDWARE LIST

 
 
				7cm
				6cm
				5cm
				4cm
				3cm
				2cm
				1cm
				0cm
8 X	8 X	8 X	1 X	
M6X38MM	M6	M6	4MM	
A1	C1	C2	D	
Bolt	Flat Washer	Spring Washer	Allen Key	

Paris TV Unit

# ASSEMBLY INSTRUCTION

**Lifestyle**  
FURNITURE  
www.lifestylefurniture.co.uk

## DRAWER LIST

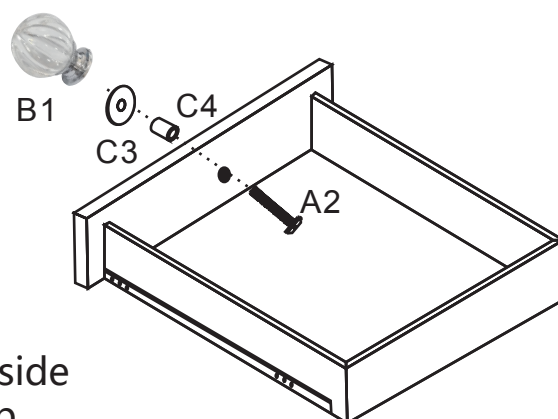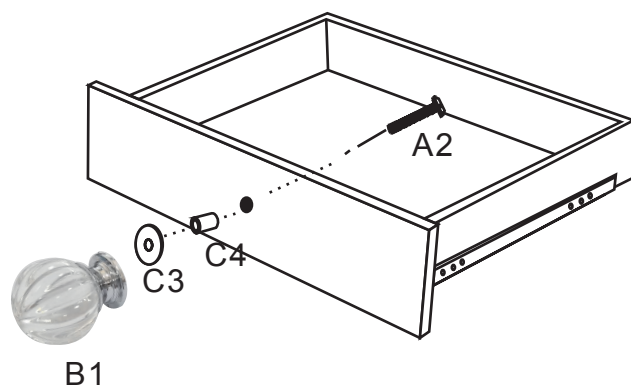

**Warning:** Ensure rubber washer toward outside of the glass. DO NOT over-tighten the knob, otherwise it will make glass broken

## HARDWARE LIST

				7cm
				6cm
				5cm
				4cm
				3cm
				2cm
				1cm
				0cm
2 X	2 X	2 X	2 X	
		M3.5	M3.5X32MM	
C4	B1	C3	A2	
Ring	Handle	Rubber Washer	bolt	

Paris TV Unit

## Top Tips before you start!

1. Please check that all parts are present before you start the assembly of your furniture, as once assembled, the furniture is exempt from our home approval policy.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people (as indicated on page 1) to assemble your product safely.
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. For the protection of your furniture, particularly items of high gloss finish, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
6. During assembly please take care not to over-tighten any fittings, as this may damage the product.

## Care and Maintenance of your furniture.

- Please periodically check all fittings and re-tighten as necessary.
- Please do not drag or pull your furniture.
- Wipe occasionally with a soft cloth slightly dampened with water. Then buff with a dry clean soft cloth.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- Please do not place hot item (e.g. hot drinks) directly on to the wood surface.
- If the glass is chipped or broken, stop using the product and consult the supplier.
- Please do not place very hot or very cold items on the glass surface, unless adequately thick table mats are used to prevent such items from coming into contact with the glass.
- Please do not use glass as chopping surface. Do not strike the glass with hard or pointed items.
- When cleaning glass panels use a damp cloth with washing up liquid or soft soap if necessary. Do not use washing powders or any other substances containing abrasives since these substances scratch glass panel.

 
# ASSEMBLY INSTRUCTION

**Lifestyle**  
FURNITURE  
[www.lifestylefurniture.co.uk](http://www.lifestylefurniture.co.uk)



## STEP 1

8 x

C1 C2 A1 D

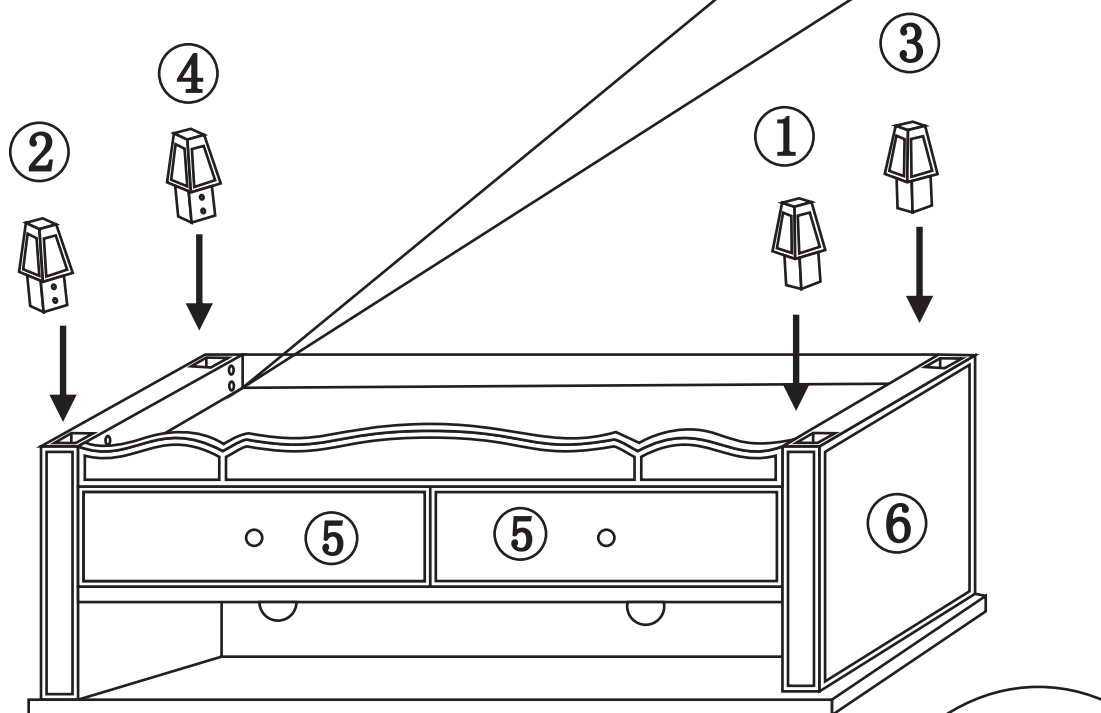


2 x

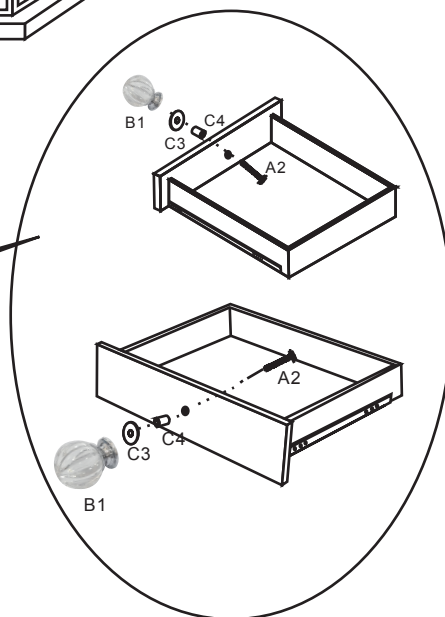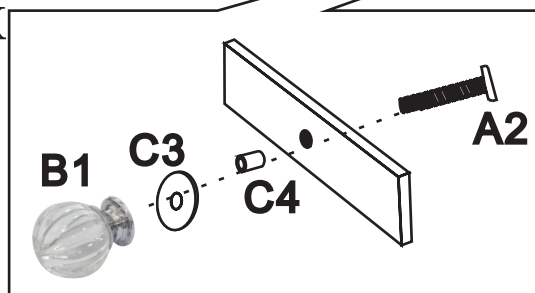  


Paris TV Unit

# FITTING OF ANTI-TIP STRAP
 
## STEP 1:

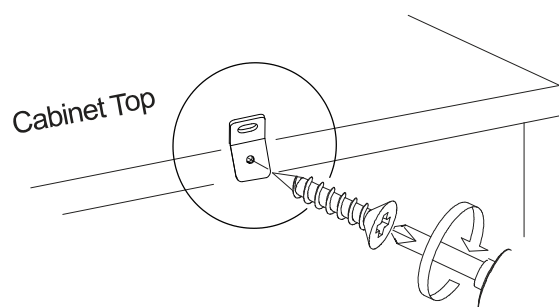


## STEP 2:

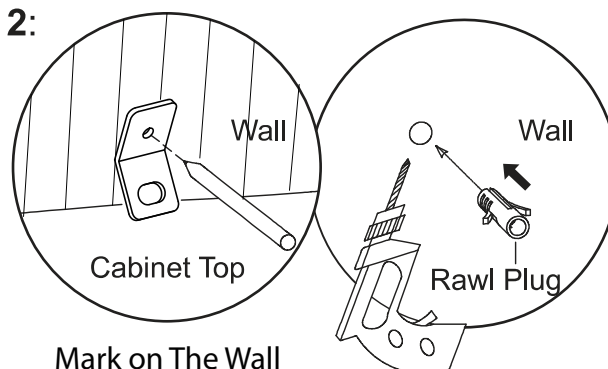 

Drill a hole in the wall and insert the rawl plug.


## STEP 3:

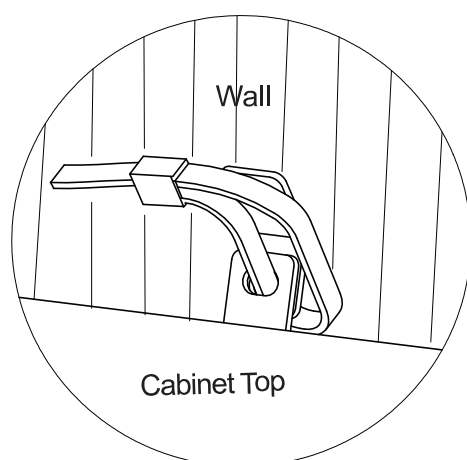 

## HARDWARE LIST



 Anti-Tip Strap




The screw supplied is to fix the Strap to the cabinet.


**Note:** Wall fixings are not supplied with this product as different wall materials require different types of fixing devices (such as Rawl plugs on brick work). You must use fixing devices suitable for the type of wall you intend to mount this products to. please ensure that the head of any screw used has diameter greater than the diameter of the mounting hole on the bracket and that the fixing is safe and secure before use.

The screw supplied is to fix the bracket to the cabinet.


## Wall Types :

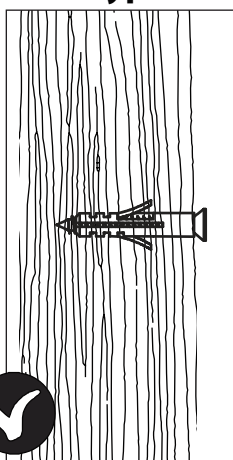 


**Wood**  
(Can use rawl plug as shown)

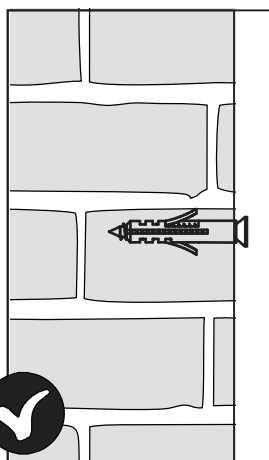 

 
**Brick & Masonry**  
(Can use rawl plug as shown)

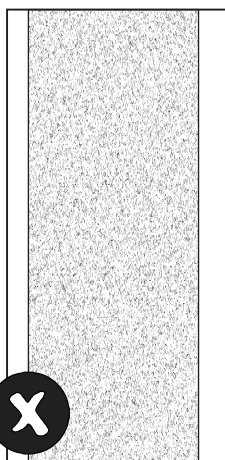

 **Chipboard**  
(Can't use any type of wall plugs)

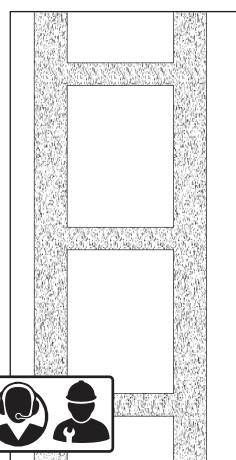

 **Cavity Wall**  
(Special toggle wall plugs are needed, Seek expert advice)

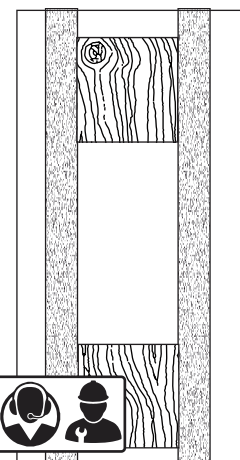

**Stud Partition/Plaster**  
(Special toggle wall plugs are needed, Seek expert advice)