ASSEMBLY INSTRUCTION



www.lifestylefurniture.co.uk

0 MINS

APPROXIMATE ASSEMBLY TIME




FLOOR AREA 2M X 2.5M



REQUIRED ASSEMBLY SPACE





ASSEMBLED DIMENSIONS







Care and Maintenance of your Furniture

- Please periodically check all fittings and re-tighten as necessary.
- Please do not drag or pull your furniture.
- Wipe occasionally with a soft cloth slightly dampened with water. Then buff with a dry clean soft cloth.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- If the glass is chipped or broken, stop using the product and consult the supplier.
- Please do not place very hot or very cold items on the glass surface, unless adequately thick table mats are used to prevent such items from coming into contact with the glass.
- Please do not use glass as chopping surface. Do not strike the glass with hard or pointed items.
- When cleaning glass panels use a damp cloth with washing up liquid or soft soap if necessary.
- Do not use washing powders or any other substances containing abrasives since these substances scratch glass panel.

ASSEMBLY INSTRUCTION


Lifestyle

FURNITURE

www.lifestylefurniture.co.uk


C3

DRAWER LIST

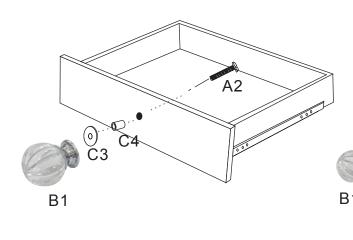


Warning: Ensure rubber washer toward outside of the glass.DO NOT over-tighten the knob, otherwise it will make glass broken

HARDWARE LIST

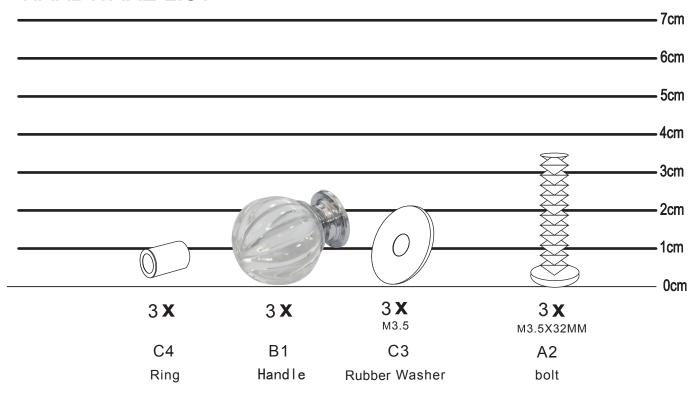


FITTING OF ANTI-TIP STRAP

STEP 1:

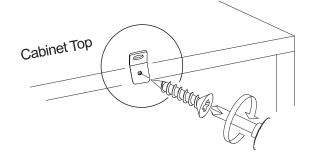


STEP 2:

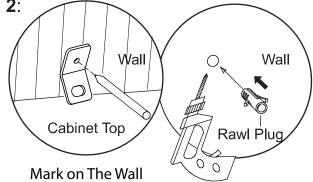


Drill a hole in the wall and insert the rawl plug.

STEP 3:

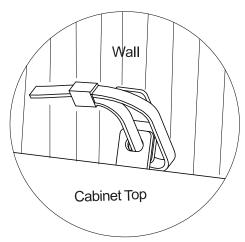

HARDWARE LIST




The screw supplied is to fix the Strap to the cabinet.


Note: Wall fixings are not supplied with this product as different wall materials require different types of fixing devices (such as Rawl plugs on brick work). You must use fixing devices suitable for the type of wall you intend to mount this products to. please ensure that the head of any screw used has diameter greater than the diameter of the mounting hole on the braket and that the fixing is safe and

The screw supplied is to fix the braket to the cabinet.


Wall Types:

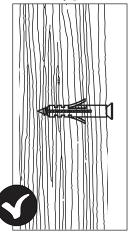


Wood (Can use rawl plug as shown)

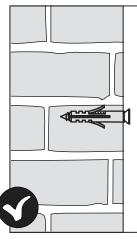


Brick & Masonry (Can use rawl plug as shown)



Chipboard (Can't use any type of wall plugs)

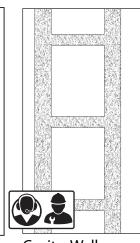

Cavity Wall
(Special toggle
wall plugs are needed,
Seek expert advice)

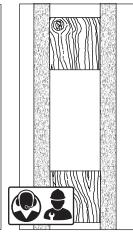

Stud Partition/
Plaster
(Special toggle
wall plugs are needed,
Seek expert advice)