






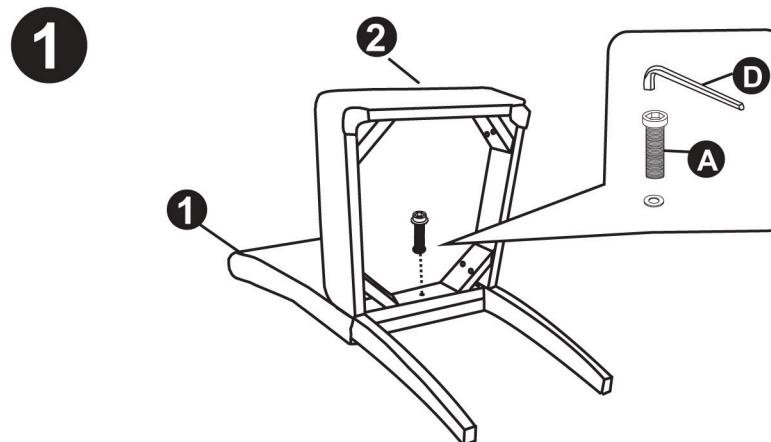
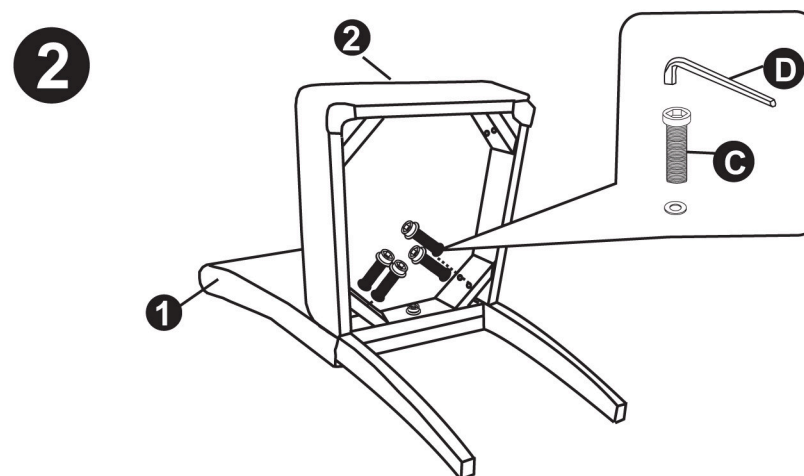


HERRAJES	CODE	PARTS			QTY.
	A	M8x50MM			1
	B	M8x60MM			4
	C	M8x90MM			4
	D	ALLEN KEY			1

ASSEMBLY INSTRUCTION CHAIR




Place the screws in the holes and tighten the screws.
Do not over-tighten (90% tight is sufficient)




Place the screws in the holes and tighten the screws.
Do not over-tighten (90% tight is sufficient)

ASSEMBLY INSTRUCTION CHAIR

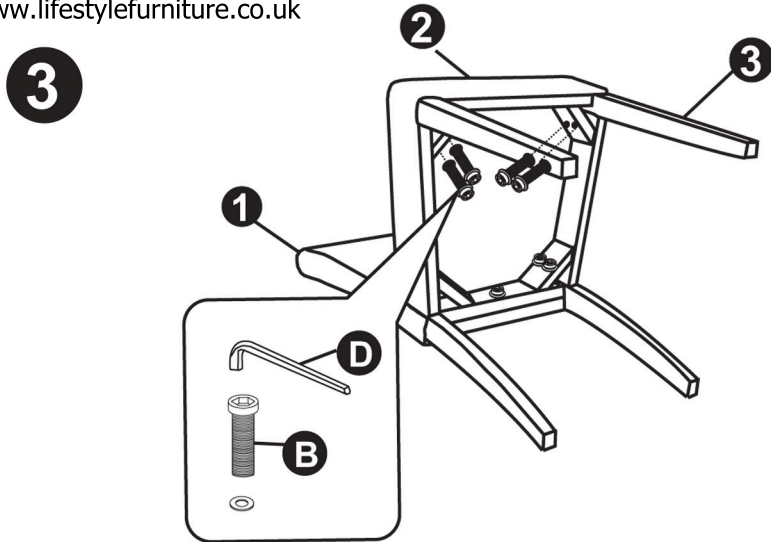


Place the screws in the holes and tighten the screws.
Do not over-tighten (90% tight is sufficient)

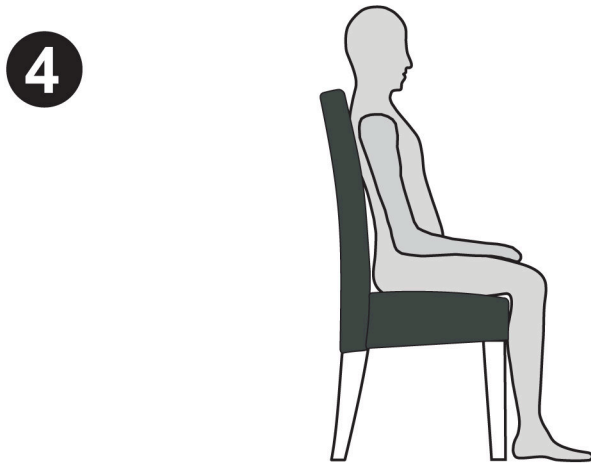


Then adjust the balance
of the chair

5

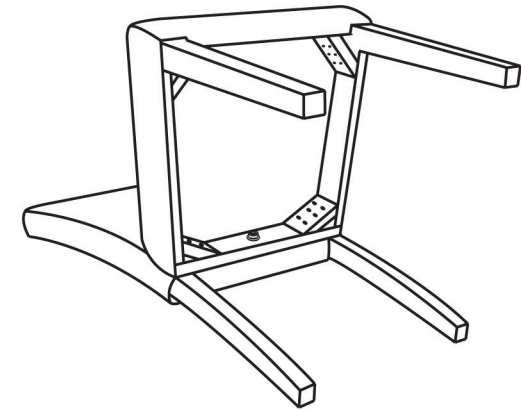

Tighten all screws to 100%

6

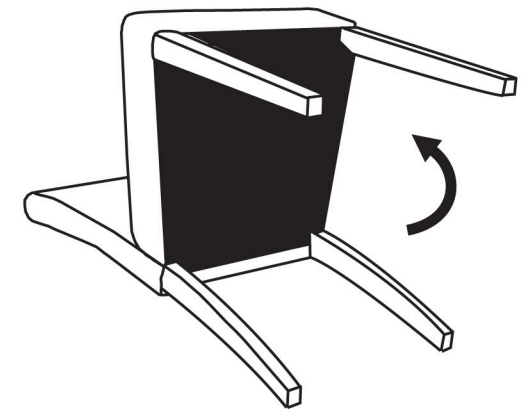

Stick the black part on the seat