




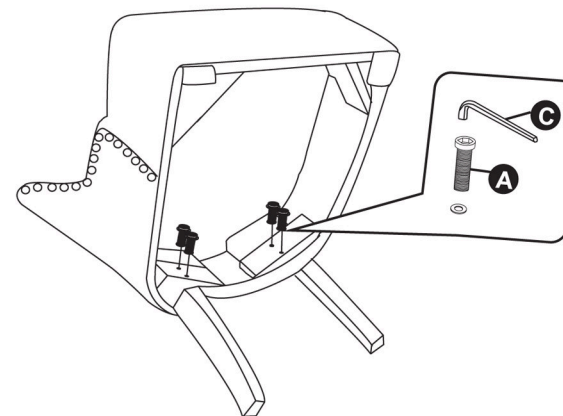


HARDWARE	CODE	PARTS	QTY.
	A	M8X40MM  	4
	B	M8X55MM  	4
	C	ALLEN KEY 	1


ASSEMBLY INSTRUCTION CHAIR

1




Place the screws in the holes and tighten the screws.
Do not over-tighten (90% tight is sufficient)

2

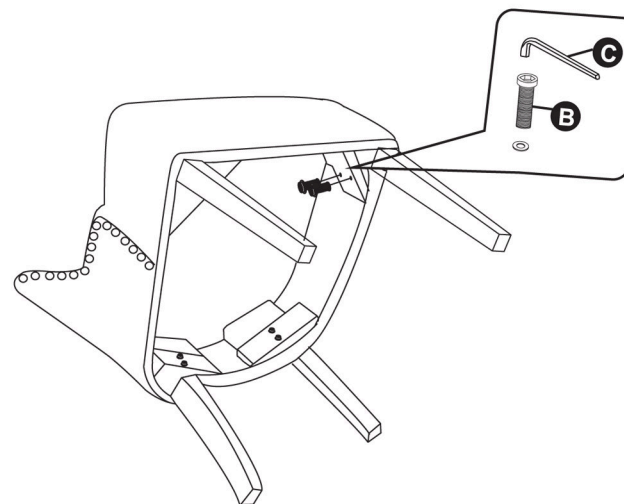


Place the screws in the holes and tighten the screws.
Do not over-tighten (90% tight is sufficient)

ASSEMBLY INSTRUCTION CHAIR

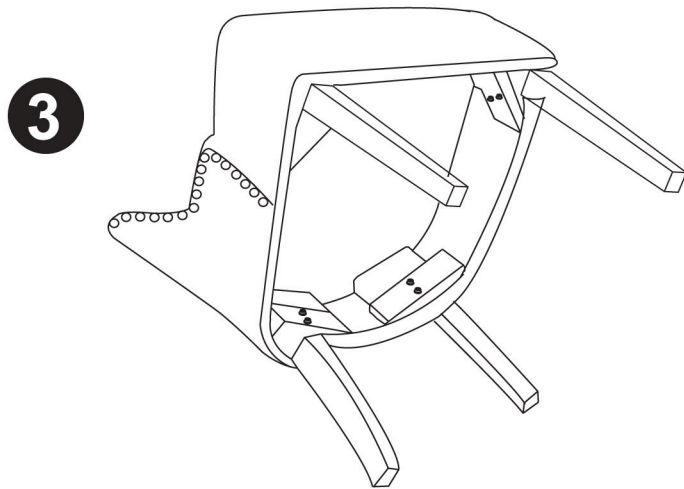

Tighten all screws to 100%

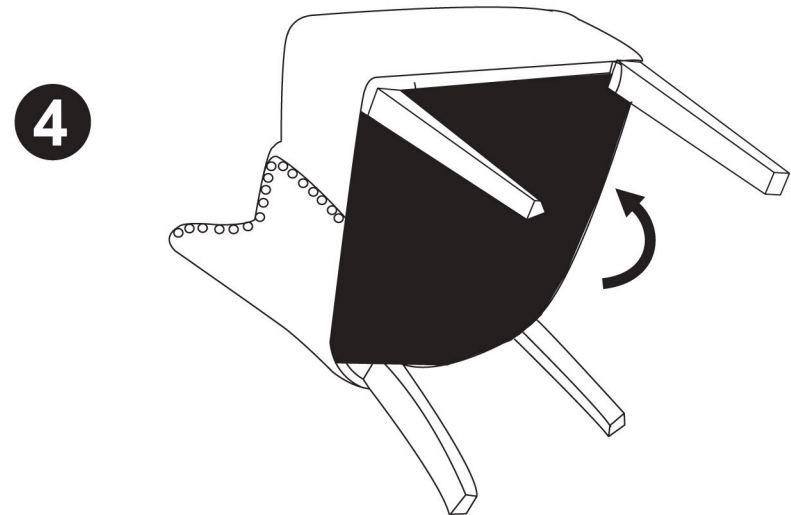

Stick the black part on the seat